



## Back Turning

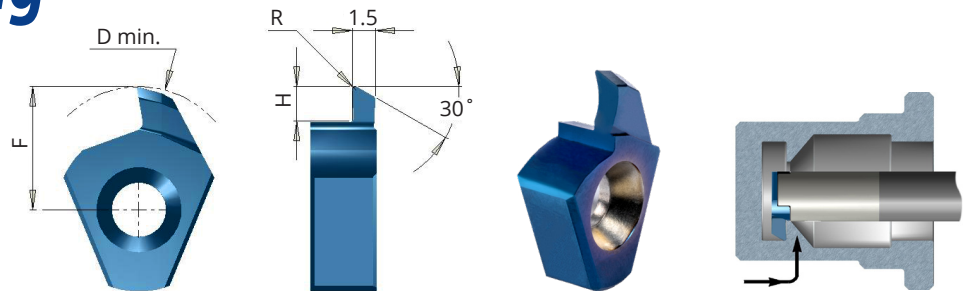

Insert Type	Ordering Code	R	H max	D min	F
T8	<b>T8 X R02 H20</b>	0.2	2.0	9.4	5.1
T10	<b>T10 X R02 H23</b>	0.2	2.3	13.1	7.9
	<b>*T10 X R02 H35</b>	0.2	3.5	13.5	7.9
	<b>T10 X R04 H23</b>	0.4	2.3	13.1	7.9

\*To use with T10 toolholders version B

## Boring and Profiling

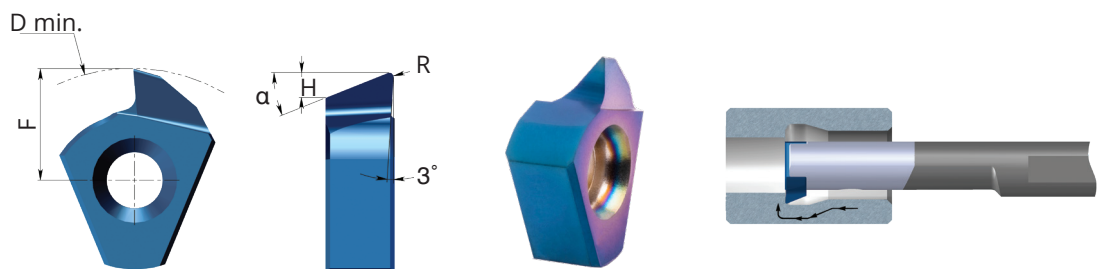


Insert Type	Ordering Code	$\alpha$	R	H	D min	F
T8	<b>T8 PR R01 A22</b>	22°	0.1	1.0	9.2	5.0
	<b>T8 PR R02 A22</b>	22°	0.2	1.0	9.2	5.0
	<b>T8 QR R01 A47</b>	47°	0.1	1.9	9.2	5.0
	<b>T8 QR R02 A47</b>	47°	0.2	1.9	9.2	5.0

Order example: T8 PR R01 A22 BLU

## Product Identification - Ordering Codes

### Inserts

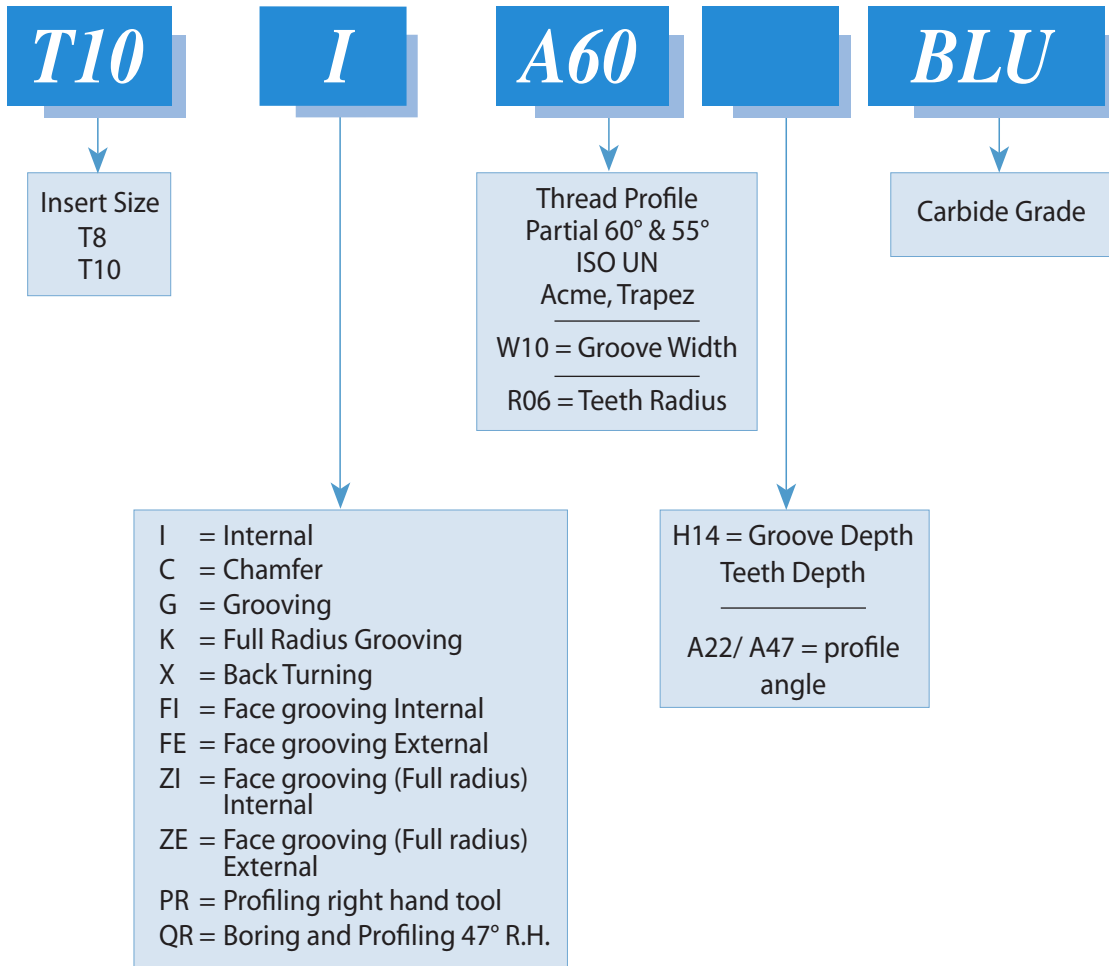

### Toolholders

